


SpeedyBee®

Quick Start Manual




ARM & Modes

The quad has been set for functions of switches or radio. Please go into the Modes tab of SpeedyBee App, test each switch of function. The corresponding function will be turned on when the yellow cursor gets moved to the set range.

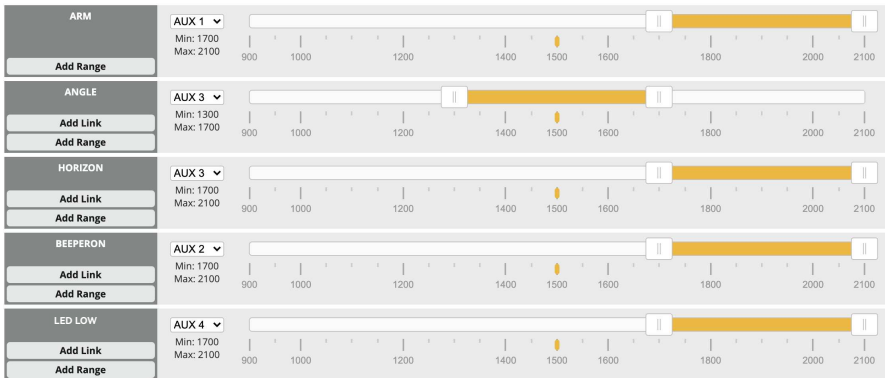


Motor direction is reversed

Disconnect BetaFlight, power on the drone,
the default motor rotation direction is not reversed.

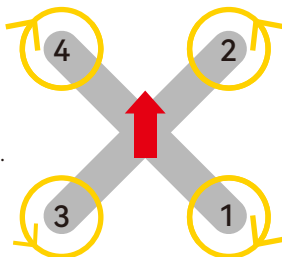

O3 Air Unit Binding

Make sure that all devices have been updated to the latest firmware versions before linking.

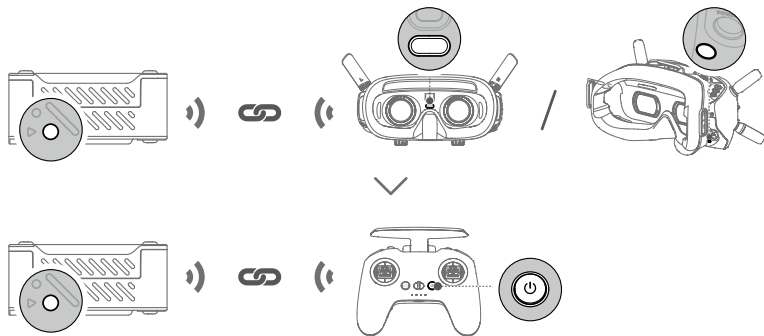

The air unit must be linked to the goggles before the remote controller.

1. Power on the air unit, the goggles, and the remote controller.
2. Press the link button of the air unit and the goggles respectively. The linking status indicator of the air unit blinks red and the goggles start to beep continually.
3. Make sure the distance between the air unit and the goggles is within 0.5 m. Once linking is successful, the linking status indicator of the air unit turns solid green. The goggles stop beeping and the live view will be displayed.
4. Press the link button of the air unit and the linking status indicator of the air unit blinks red. Press and hold the power button of the remote controller. The remote controller starts to beep continually and the battery level LEDs blink in sequence.
5. Make sure the distance between the air unit and the remote controller is within 0.5 m. Once linking is successful, the linking status indicator of the air unit turns solid green and the remote controller stops beeping.

 
How to bind Falcon

1. Turn on the FPV Goggles, Remote Controller, and power the Quadcopter. Click the bind button of FPV Goggles, the beep sound indicates that Goggles are in the binding status.



Bind Button

2. Press the Falcon button, light turns red, indicating that Falcon is binding. When the bind succeeds, Goggles make beep sounds, the light will be solid green, and FPV Goggles will display the live images.




Binding



Binding Succeeded

3. Press the C1 Custom Button, Record Button and Right Scrool Wheel Button at the same time. The blue light flashes with beep sounds, indicating that the controller is at binding status.

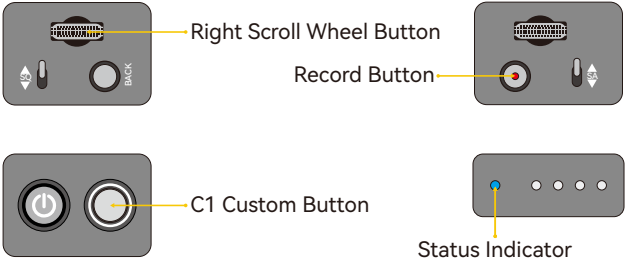

4. Press the Falcon Bind Button, the light turns red indicating binding. When the binding succeeds, the Falcon light and the light of controller will turn green.



First Usage Guidance

Search and download 'SpeedyBee' on Google Play or App Store.

Power the quad and launch the SpeedyBee app and search the quad via Bluetooth.

The first usage guidance will show up in the app. Follow the steps to bind your radio receiver. Then enjoy flying!




TX800 Settings

LED LIGHT

CHANNEL

BAND

POWER

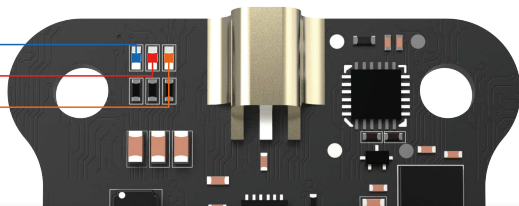

Blue LED
Channel

Red LED
Band

Orange LED
Power

Lock	Constantly ON: The current frequency point is Channel 1	Red LED will keep blinking , at this time the Red LED is not used to indicate the current Band information.	Orange LED will keep blinking , at this time the Orange LED is not used for indicating the current Power information.
Unlock	OFF: The current frequency point is one of Channel 2~Channel 8.	Constantly ON: the current band is Band1 Constantly ON: the current band is one of Band 2 ~ Band 6.	Light OFF — 25mW Blinking once in 2 seconds — 200mW Blinking once in 1 second — 400mW Constantly ON — 800mW Blinking twice in 1 second (fastFlash) — PIT mode

Power Setup(Lock & Unlock)

 
 
 
 
The factory default setting is in LOCK mode with red LED blinking and only 25mW is available. You can switch to UNLOCK mode by long pressing the button for 10 seconds, and the red LED will be constant ON or OFF, but not blinking.

Note:


Before you get VTX unlocked, it is highly recommended to know about the rules and regulations in your country about the frequency to avoid a fine or confiscation of your device.

How to bind TBS Nano RX


1. Press and hold the bind button of the TBS Nano Rx receiver, and power on the quad at the same. Release the bind button, the green light on the receiver starts to blink rapidly. Then long press the bind button again for 8 seconds until the green light goes off and the red light blinks slowly. At this time, a dialog of "Update Micro TX?" will show up on the radio screen, select '[ENTER]'.
2. It will bind automatically after updating. When the Binding succeeds, screen will show "Binding OK", and the receiver will show a solid green light.




TBS NanoRX

 

Bind Button
Indicator Light

 

Binding



 


Binding Succeeded


ELRS Binding

Before binding, it is recommended to check if the firmware of the module and the receiver are consistent. If they are not, please use SpeedyBee APP to update firmware.

1. Power on and off the drone three times, enabling the receiver to enter binding mode. When LED of the receiver flashes quickly twice, it indicates that the receiver has entered binding mode.
2. For the RadioMaster TX16S remote controller, power on it, and long press the SYS button to access TOOLS interface, slide the cursor down, select ExpressLRS, and then select Bind and press Enter.
3. When the receiver has a solid LED on, it indicates that the binding is successful.

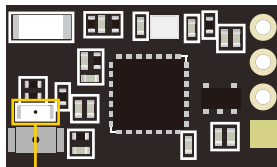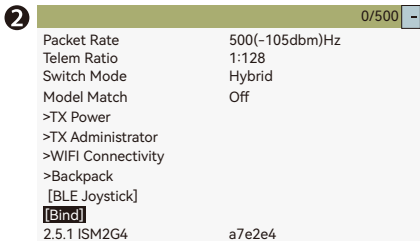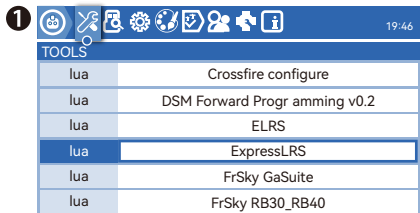


LED blinks twice: during binding

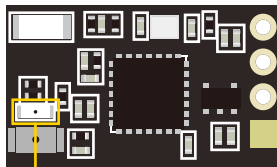

Solid LED: binding successful

Connecting the receiver of the Bee 35 ELRS or the PNP version to the UART3 port of the flight controller may cause a DFU hijacking issue, preventing entering DFU mode for firmware flashing. However, this does not affect flight operations. For more detailed information, please refer to the official documentation of Betaflight (<https://betaflight.com/docs/wiki/guides/current/DFU-Hijacking>).

Therefore, when flashing the flight controller firmware on the Master5 V2 ELRS and PNP drone, it is necessary to first disconnect the connection between the receiver and the flight controller's cable (no need to desolder the cable). Reconnect the receiver's cable after flash. DFU Hijacking | BetaflightIntroductionbetaflight.com

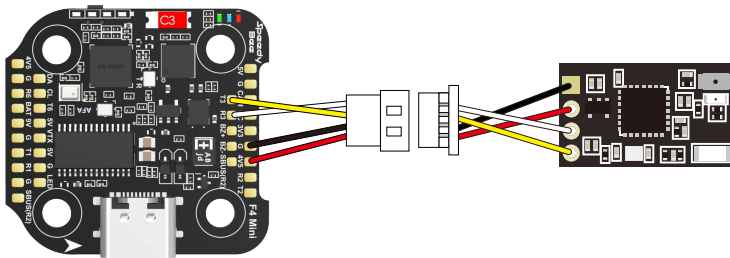

Check before take of

1. Please conduct an inspection for the drone. Check if there are broken parts or damage, and please conduct further check or repair if needed;
2. Please confirm whether the propellers are in the correct direction, and whether screws are locked;
3. Please check if battery is fixed by the strap. To adjust or fix it for balance in case that it gets hit by propellers;
4. Please check the battery voltage. When the battery is fully charged, it should be 16.8V for a 4S, 25.2V for a 6S;
5. Turn on the controller and select the correct model. Please make sure that the arming switch is "disarmed" and the throttle is in the lowest position;
6. Turn on the FPV Goggles or screen to check whether there are interference;
7. After powering the drone, please test arming in a safe distance (at least 3 meters), and check whether propellers work normally;
8. Please take off in a safe area without people, and enjoy your flying!

After-sale Service

Please send feedback via SpeedyBee App or send an e-mail to contact@speedybee.com

*Problems will be solved quicker if we could be provided with screenshots of order, clear photos of product and a demonstration video of problem.